

MAINTENANCE SCHEDULE



These required maintenance procedures should be performed at the frequency stated in the table. They should also be included as part of any seasonal tune-up.

FREQUENCY	MAINTENANCE REQUIRED
Daily or Before Starting Engine	Fill Fuel Tank. Check Oil Level. Check air cleaner for dirty, loose, or damaged parts. Check air intake and cooling areas, clean as necessary. WARNING NEVER LEAVE MACHINERY UNATTENDED WHILE RUNNING KEEP ALL OBJECTS FREE AND CLEAR FROM EXHAUST SYSTEM OTHERWISE FIRE OR INJURY MAY RESULT
Every 100 Hours	Replace air cleaner element. Remove cooling shrouds and clean cooling areas. Check oil cooler fins, clean as necessary (if equipped).
Every 200 Hours	Change oil & air filter. (More frequently under severe conditions.) Replace fuel filter. Grease all bearings (if applicable). Replace heavy-duty air cleaner element.

Perform these maintenance procedures more frequently under extremely dusty, dirty conditions.
(Read owners manual for more details).